

# MODEL N° 90056 OWNER'S MANUAL

Keep this Product ID Number and use when contacting Customer Service:

# REGISTER YOUR PRODUCT ONLINE AT WWW.LIFETIME.COM

# At Lifetime, we are committed to providing innovative and quality products. While registering, you will have the opportunity to give us your feedback. Your input is valuable to us.

- You can also opt in to receive new product notifications or promotions.
- In the unlikely event of a product recall or safety modification, your registration provides the information we need to notify you directly.
- Registration is fast, easy, and completely voluntary.

#### Lifetime's Promise to You:

Maintaining your privacy is our long-standing policy at Lifetime. And you can rest assured that Lifetime will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!

Save this owner's manual for future reference and in the event that the manufacturer has to be contacted.

Questions or Missing Parts?

TO SAVE TIME WHEN CONTACTING CUSTOMER SERVICE, PLEASE HAVE THE PRODUCT ID AVAILABLE BEFORE YOU CALL; IT'S LOCATED AT THE BOTTOM-LEFT CORNER OF THE FRONT PAGE OF THIS MANUAL.

### \*U.S. and Canada customers ONLY\*\*

# DO NOT CONTACT THE STORE! CALL OUR CUSTOMER SERVICE DEPARTMENT at 1 (800) 225-3865

HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time) \*\*Call, or visit our Web site for Saturday hours\*\*

### \*\*For Assistance in Europe,\*\*

Please contact:

### LIFETIME EUROPE

After Sales, Euro Base IDA Industrial Estate, Cork Road Waterford, Ireland LEUservices@euro-base.com Or call:

### 00 800 85561360

FOR CUSTOMERS OUTSIDE THE U.S., CANADA, or EUROPE, PLEASE CONTACT THE STORE FOR ASSISTANCE.



# FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

To ensure safety, do not attempt to assemble this product without reading and following all instructions carefully. Check the entire box and inside all packing materials for parts and/or additional instruction material. <u>Before beginning assembly</u>, identify and inventory all parts and hardware using the parts and hardware lists and <u>identifiers in this document</u>. Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury. A high probability of serious injury exists if this product is not installed, maintained, and/or operated properly. Failure to comply with any of the warnings in this instruction manual may result in serious personal injuries such as cuts, broken bones, nerve damage, paralysis, brain injury, or death. Failure to comply may also result in property damage. Please heed all warnings and cautions.

• If using a ladder during assembly, use extreme caution.

• Two capable adults are recommended for this operation.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this product.

# **BEFORE BEGINNING ASSEMBLY**


Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.



Identify and inventory all parts and hardware using the parts and hardware lists and identifiers in this document.



Test fit all Bolts by inserting them into their respective holes. If necessary, carefully scrape away any excess powder coating buildup from inside the holes. Do not scrape away all of the powder coating. Bare metal may rust. You may need to pound some Bolts into place with a hammer or mallet.

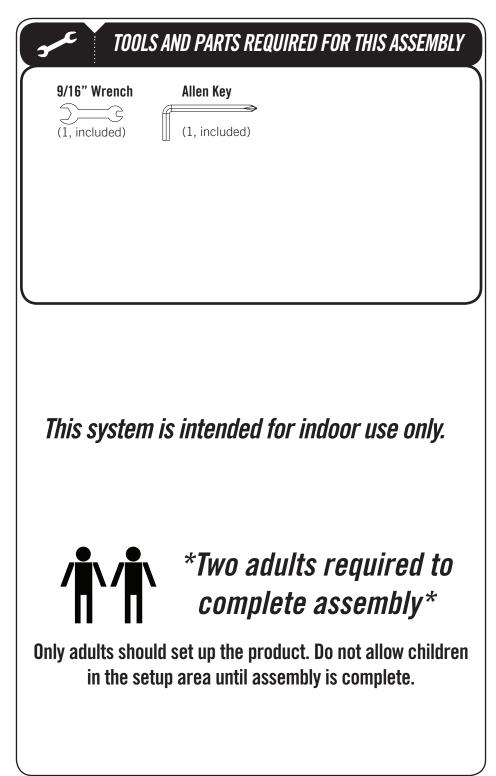

# ASSEMBLY GUIDES

# *Refer to the following areas throughout the instructions to assist in the assembly process:*

This area is located at the top, left-hand corner of the page and indicates which tools and hardware are needed to complete the assembly steps on a page.



This area is usually located in the bottom, left-hand corner of a step and indicates that special attention is needed to perform a particular part of a step.





These areas are usually located in the bottom, right-hand corner of a step and indicate that damage to the product or serious injury may occur if the caution or warning is not heeded.





WARNING


	PARTS LIST			
	i i i i i i i i i i i i i i i i i i i	Qty	$\checkmark$	
AJI	Backboard	1	È	
ALX	Rim	2		
AKZ	Net	2		
BLP	Ball	7		
BLQ	Electronic Scoreboard	1		
BLR	Electronic Power Source	1		
BLS	Ball Return (not shown)	1		
BLT	Fold-up Plate	2		
BLU	Bottom Brace	1		
BLV	Cross Bar	2		
BLW	Lean Bar	1		
BLX	Front Leg	2		
BLY	Middle Leg	2		
BLZ	Rear Cross Brace	2		
BMA	Rear, Bottom Leg	2		
BMB	Rear, Middle Leg	2		
BMC	Rear, Top Leg	2		
BOF	Side Rail	1		
BMD	Side Rail with Push Button	1		
BME	Height Spacer	2		
BMF	Upper, Middle Leg	2		
BQB	Ball Pump and Needle (not shown)	1		
BPV	Pinch Warning Sticker (applied to BLT)	2		
BPU	Fold Up Warning Sticker (applied to BMD)	1		
	HARDWARE LIST	-		
		: 0tu		
	<u>Item Description</u> Hardware Blister Pack (1055075)	Qty	$\checkmark$	
BMJ	3/8" x 1" Button Head Cap Screw	8	П	
AAF	3/8" Washer	12	Н	
BKJ	3/8" Cap Nut	26	H	
AAP	#6 x 3/8" Phillips Pan Head Screw	8	H	
BNZ	M5 x 15mm Screw	4	H	
BOA	M5 Nylock Nut	4	H	
AOQ	Allen/ Phillips Key	1	Ë	
BPW	9/16" Wrench	1	H	
BML	3/8" x 2" Button Head Cap Screw	6	H	
BMN	Retaining Hook	2	H	
BMK	3/8" x 2 1/2" Button Head Cap Screw	4	H	
BMM	3/8" x 3 1/4" Button Head Cap Screw	6	H	
BOC	3/8" x 3 1/2" Button Head Cap Screw	2	H	
BOB	3/8" Plug	4	Ë	
BPI	1/2" x 1 1/2" Spacer	1	ö	

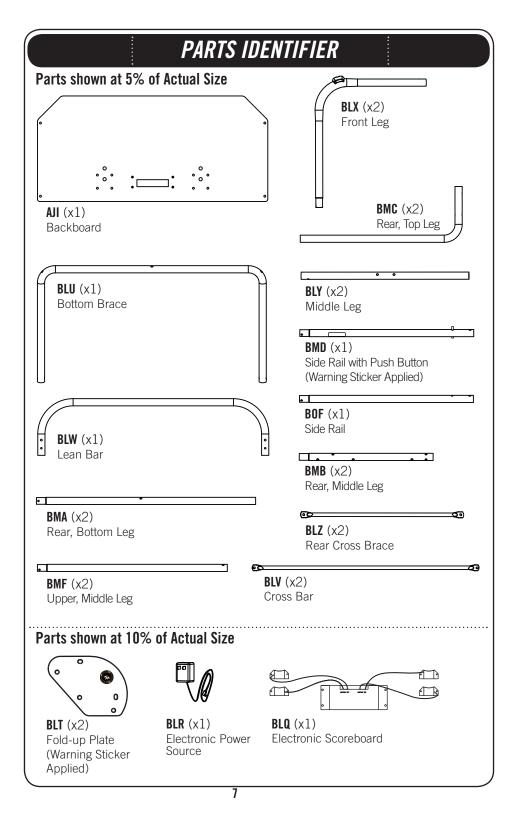


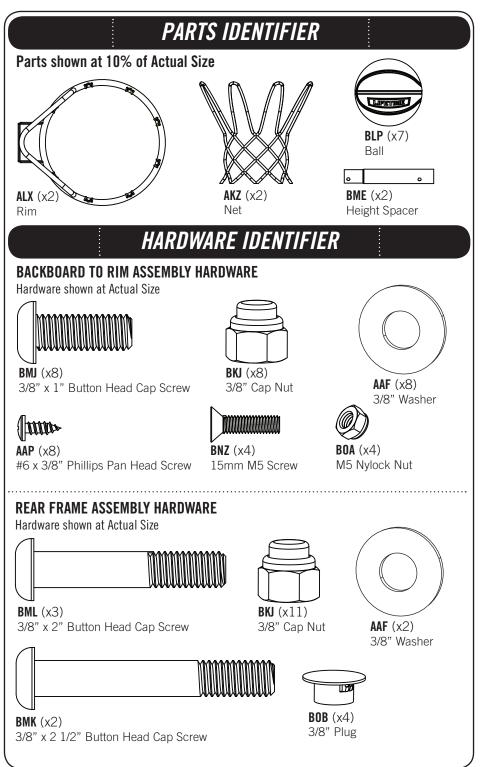


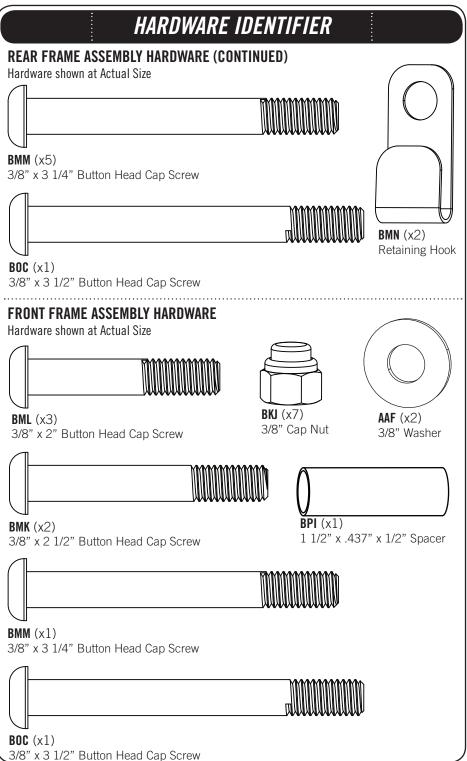


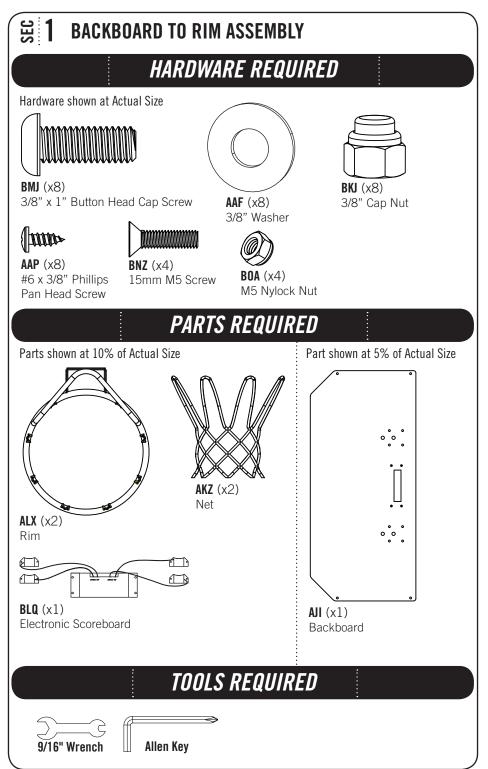

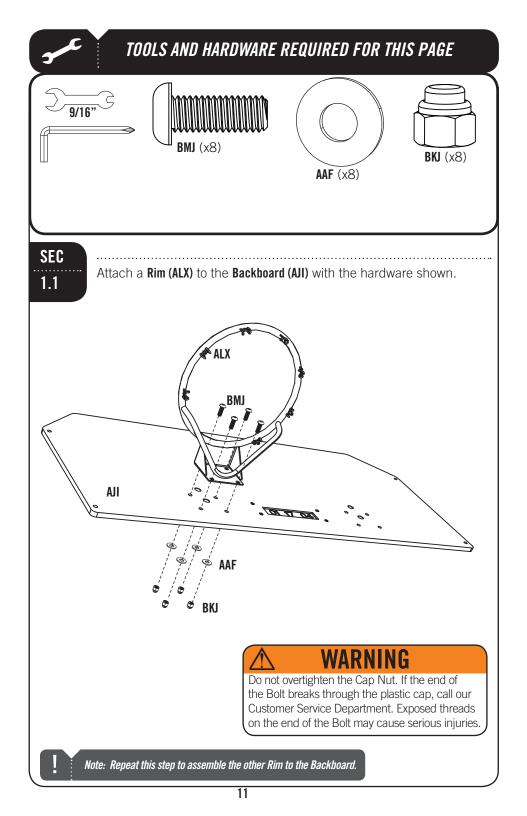

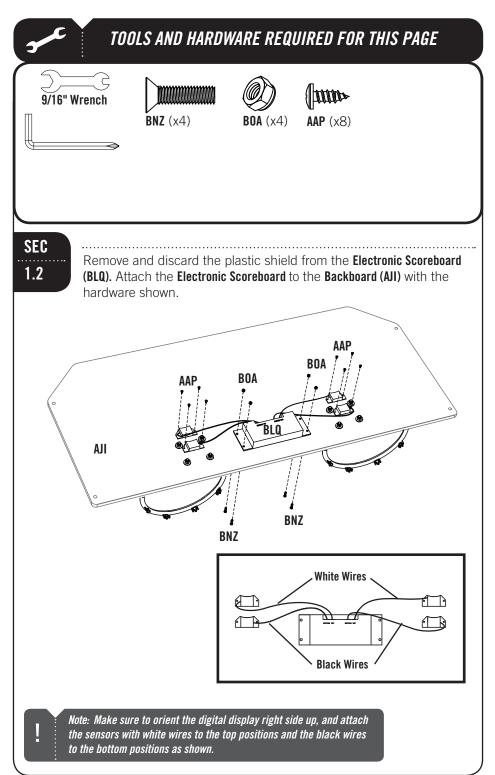

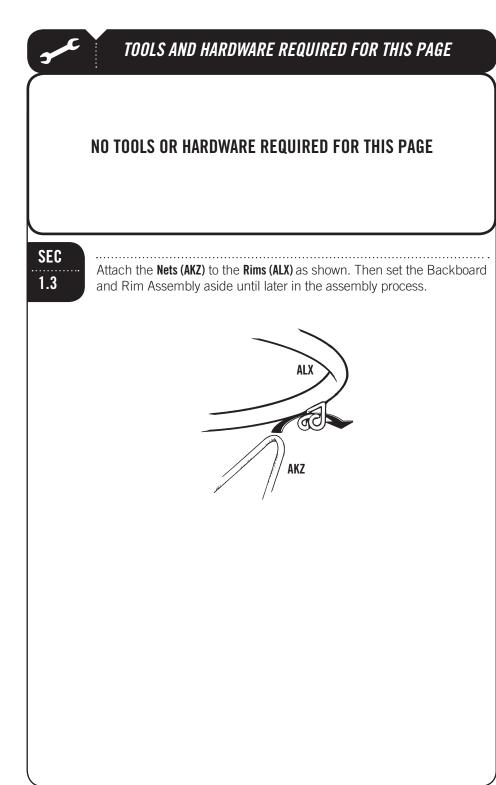

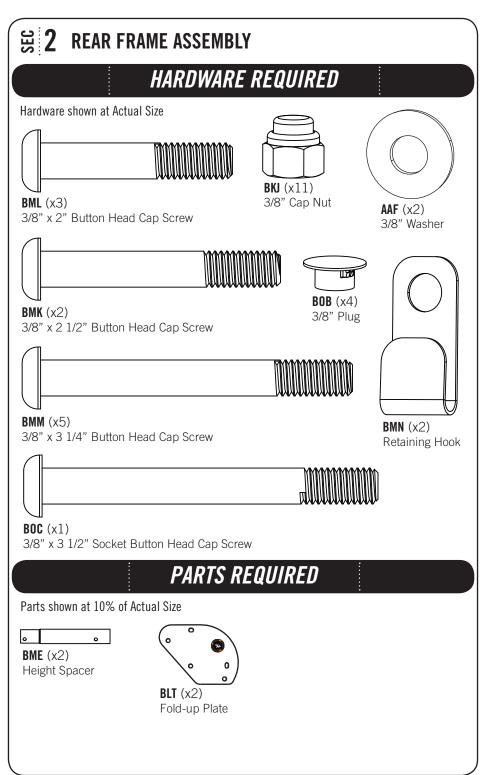

# B 2 REAR FRAME ASSEMBLY

# PARTS REQUIRED

### Parts shown at 5% of Actual Size

**BLU** (x1) Bottom Brace

### •

BMA (x2) Rear, Bottom Leg

#### • **BMF** (x2)

Upper, Middle Leg

BMC (x2) Rear, Top Leg

Γ. BMB (x2) Rear, Middle Leg .

00

0 **BLZ** (x2) Rear Cross Brace

. .

**BLY** (x2) Middle Leg

# TOOLS REQUIRED

5-	
$\leq$	Wasard
9/16"	Wrench






### NO TOOLS OR HARDWARE REQUIRED FOR THIS PAGE

SEC 2.1

If the system will be placed under a ceiling that is at least 7 feet 6 inches tall, press down on the push button on the **Rear**, **Middle Leg (BMB)** and insert the swaged end of the Rear, Middle Leg into the **Height Spacer (BME)** as shown. If the system will be placed under a ceiling that is 7 feet tall, do not perform this step.

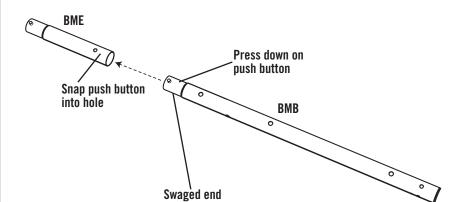

Note: Not all push buttons on Rear Frame Assembly will line up with each other.

Note: Measure the height of the ceiling to determine whether or not to perform this step.



## NO TOOLS OR HARDWARE REQUIRED FOR THIS PAGE

SEC 2.2

BMC

Snap push button into hole


Press down on the push button on the **Height Spacer (BME)** (or the **Rear**, **Middle Leg (BMB)** if step 2.2 was not performed) and insert the swaged end of the Rear Leg Assembly into the **Rear**, **Top Leg (BMC)** until the push button snaps into the hole indicated.

Press down on push button

BMB

Note: Repeat steps 2.1 through 2.3 to assemble the other Rear Leg Assembly.


BME

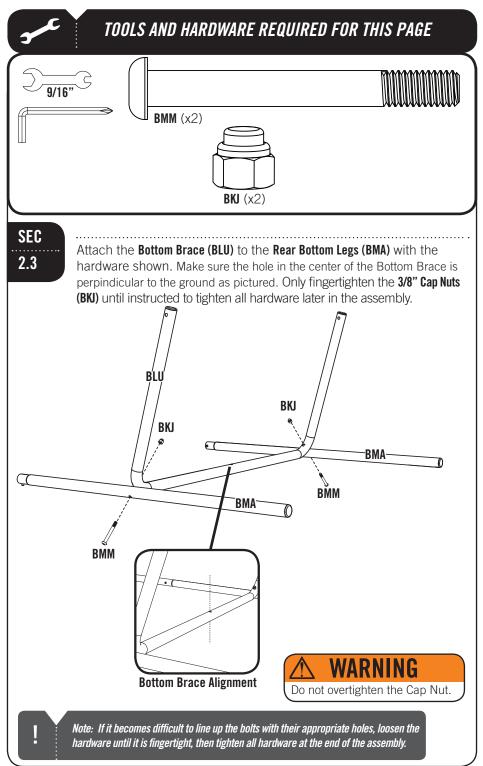


### NO TOOLS OR HARDWARE REQUIRED FOR THIS PAGE


SEC 2.4


Attach the **Rear Bottom Legs (BMA)** to the Rear Top Leg Assemblies as shown. Press down on the push button on the Rear, Bottom Leg and insert the swaged end of the Rear, Bottom Leg into the **Rear, Middle Leg (BMB)** until the push button snaps into the hole indicated. Make sure the assembly resembles the Side View below before moving on to the next step.

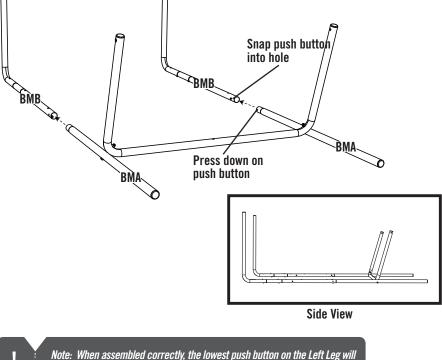



face a different direction than the lowest push button on the Right Leg.

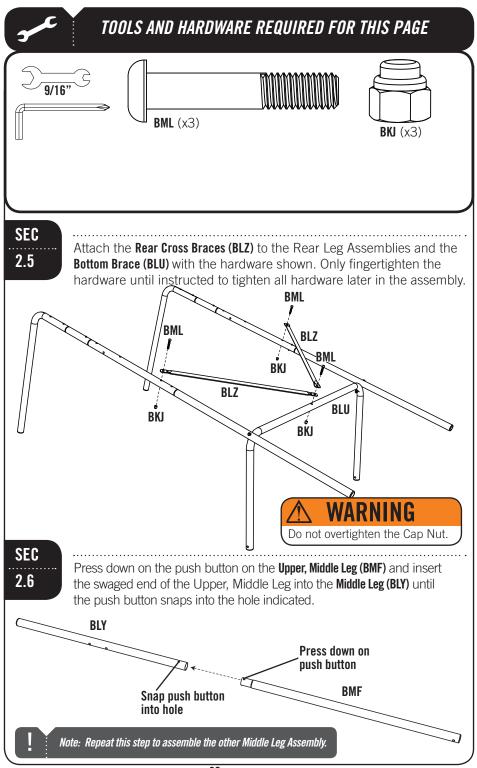


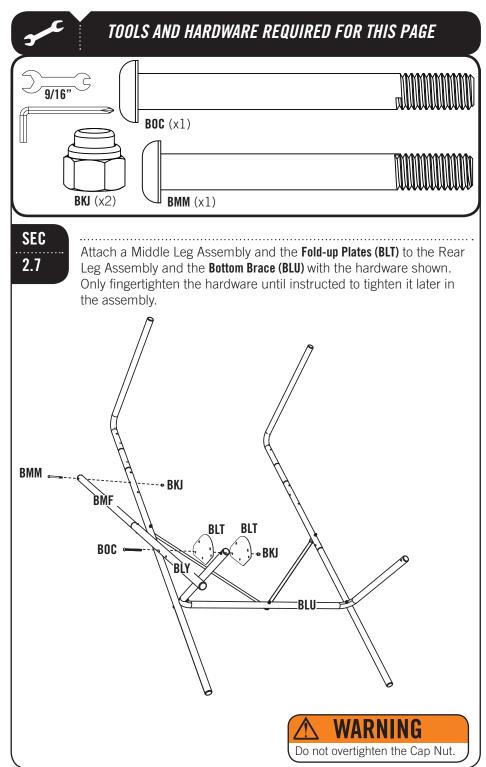


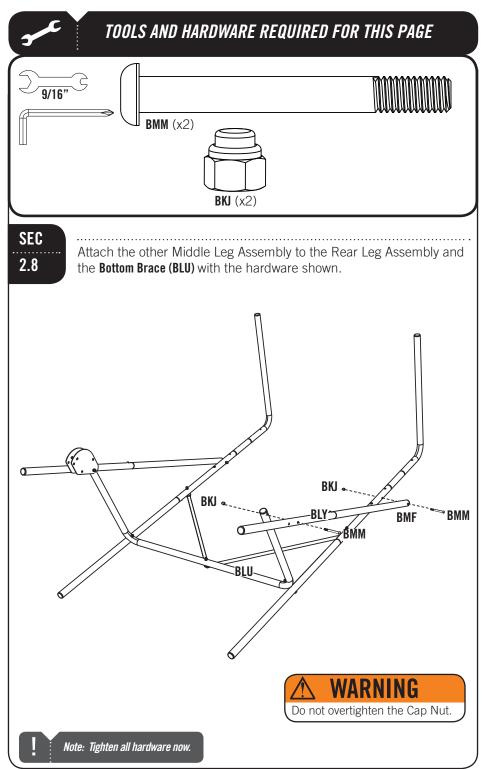


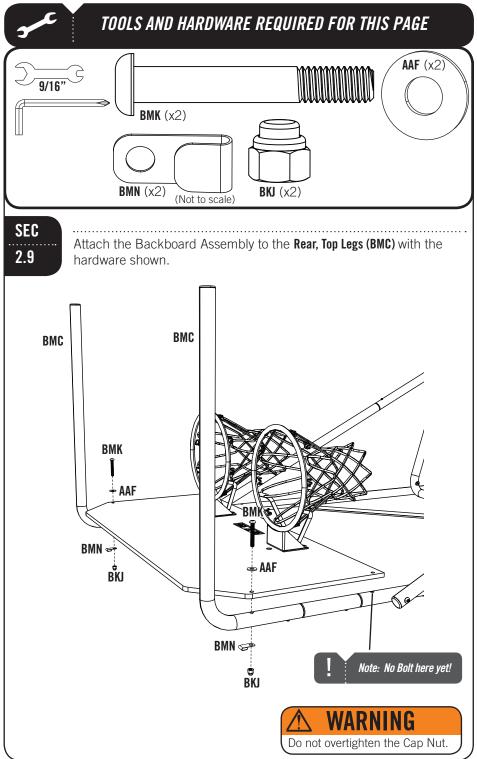


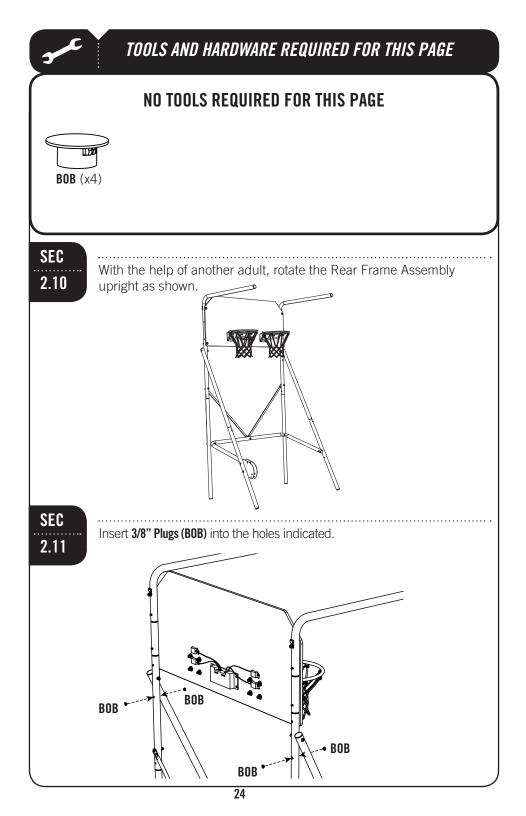


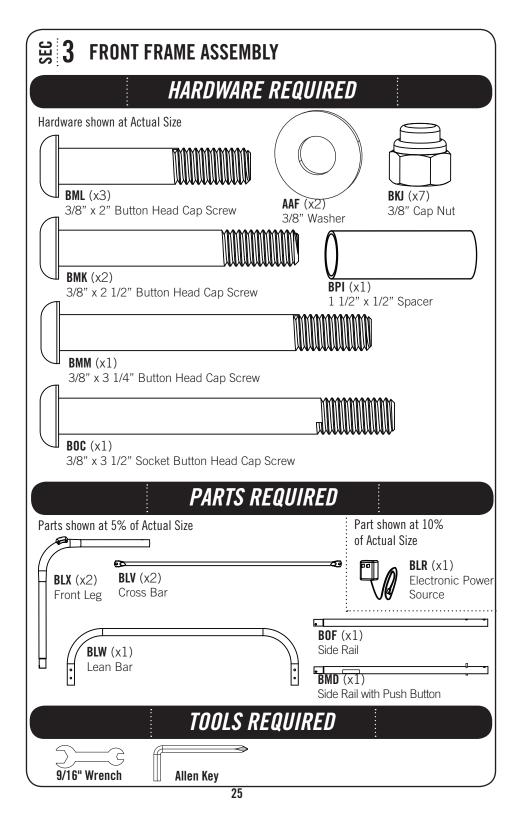


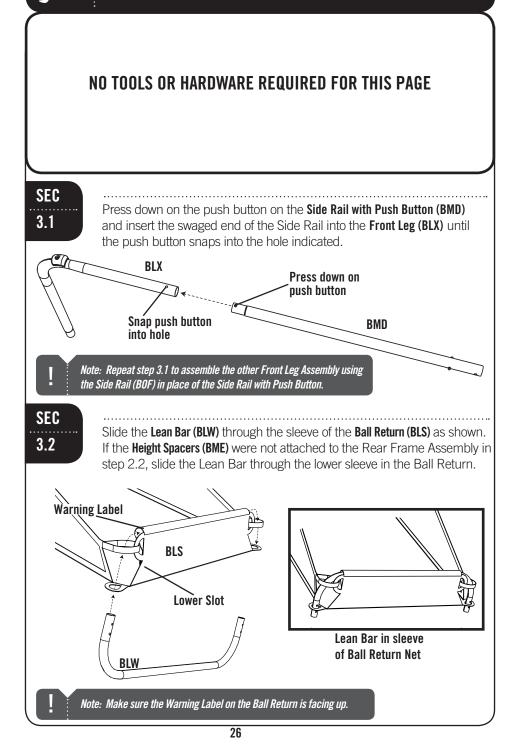


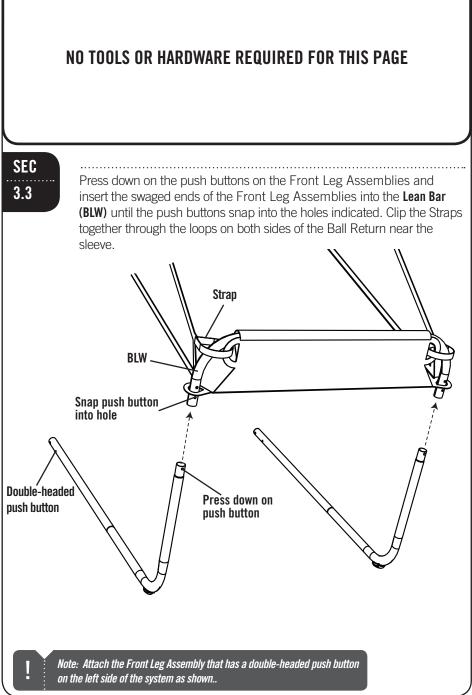

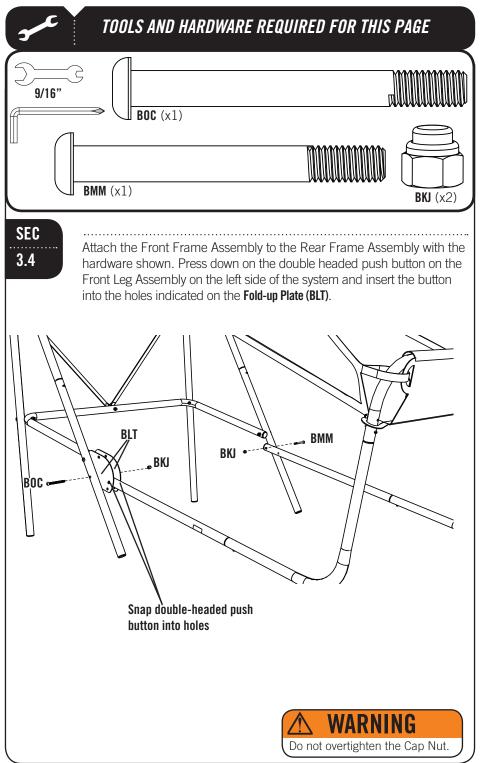

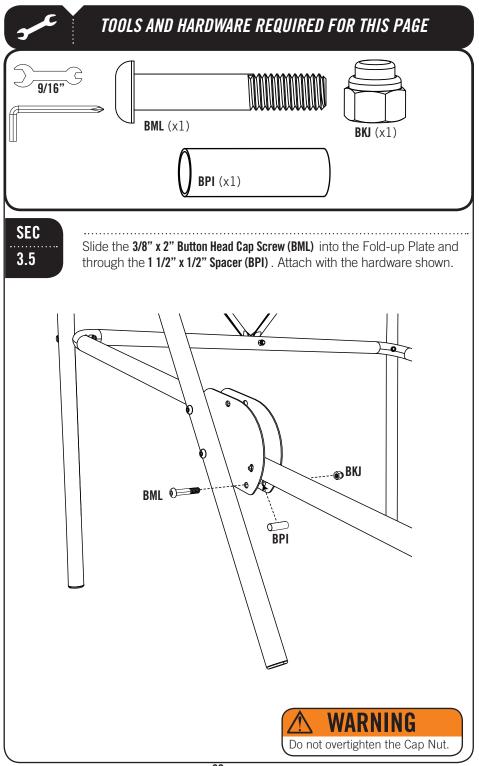

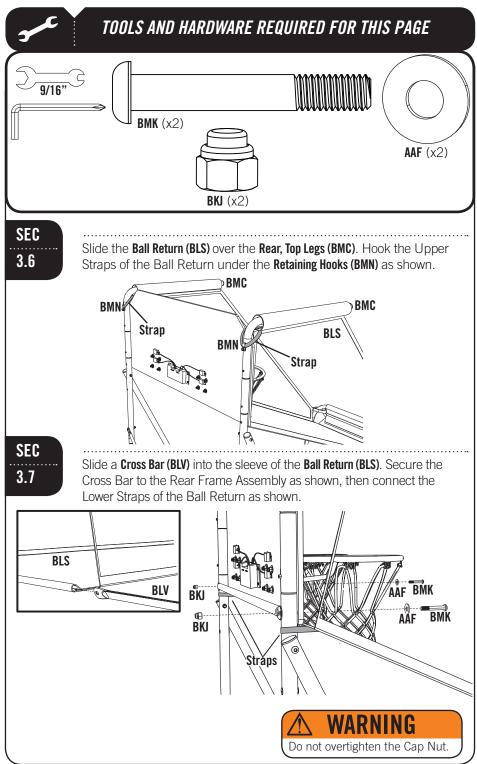


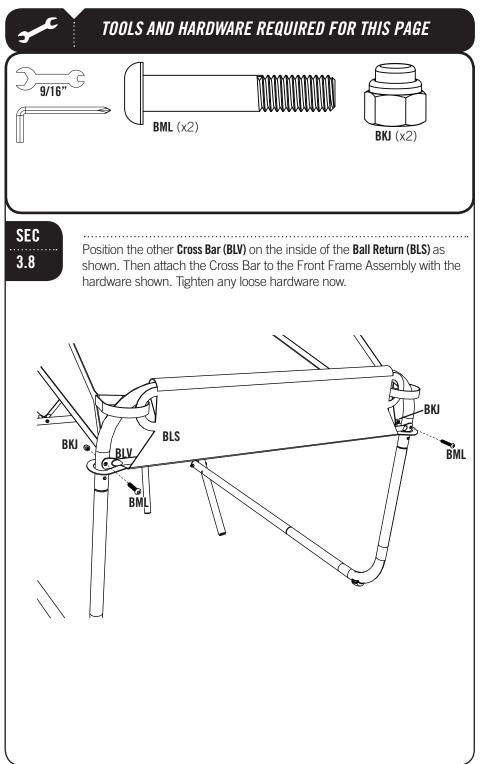


## NO TOOLS OR HARDWARE REQUIRED FOR THIS PAGE

SEC 3.9

Connect the **Electronic Power Source (BLR)** to the **Electronic Scoreboard (BLQ)** as shown. The Scoreboard can also be powered by four AA batteries (not included).

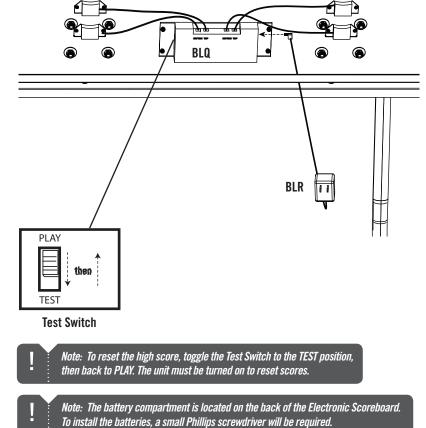

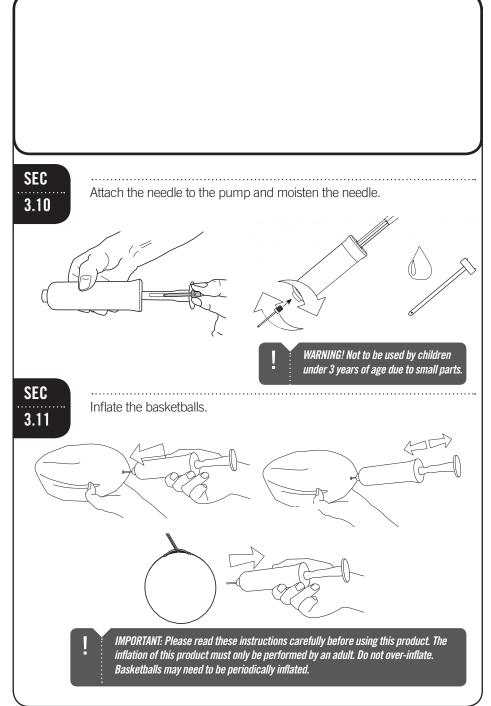

# GAME PLAY

### How to Play:

Each game consists of a possible 3 rounds.


Round 1: In the first round, each player has 30 seconds to reach 30 points and move on to round 2. Each basket is worth 2 points for the first 20 seconds, and 3 points for the last 10 seconds. Players who do not score the required points will not advance to the next round.

Round 2: Advancing players are given 15 additional seconds to reach 60 points and move on to the third and final round. Every shot is now worth 3 points. Players who do not have 60 points when the buzzer sounds will not advance to round 3.

Round 3: Each shot is worth 3 points. When the buzzer sounds at the end of round 3, the highest score wins!

### The Electronic Scoreboard:

The Scoreboard display consists of three parts--Player 1's score, the Timer, and Player 2's score.

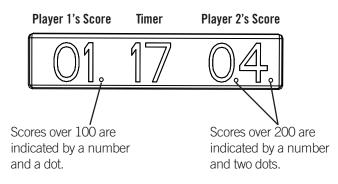


When the system is not being played, the Electronic Scoreboard displays the High Score. To reset the high score, see Sec 3.9 of these instructions.


# SENSOR ADJUSTMENT


### How to adjust the sensors:

- 1. The Test Switch on the **Electronic Scoreboard (BLQ)** should be put into Test mode. The Scoreboard will show 88 for both the Player 1 and Player 2 scores.
- 2. Hold a ball as if it is going through the rim at the frontmost edge.
- 3. Determine if sensors both top and bottom are detecting the ball: 8 = no ball is detected, 1 = is detecting a ball. The first number on the scoreboard represents the top sensor, and the second number represents the bottom sensor.
- 4. Both sensors should be detecting the ball in this position. The scoreboard should read 11 (top sensor, bottom sensor).
- 5. If needed, adjust each sensor by rotating the knob on the back of each sensor.
- 6. Reposition the ball so it is just in front of the rim.
- 7. Adjust sensors so that the ball is not detected in this position. The scoreboard should read 88.
- 8. If needed, repeat this process to ensure proper adjustment in both player positions.

Note: If a sensor is always detecting or always not detecting, then it is not working properly. Ensure the sensor is correctly plugged into the main unit. Make sure it is clear of obstructions and dirt. If it is still not functioning correctly, contact customer service.

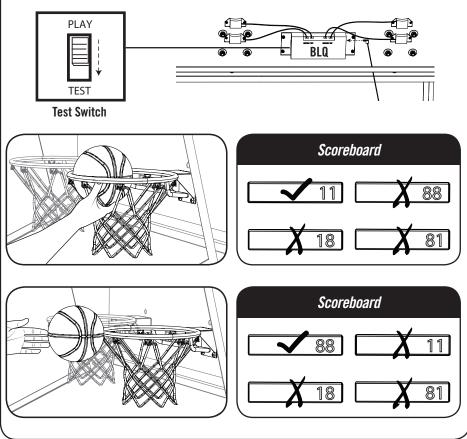

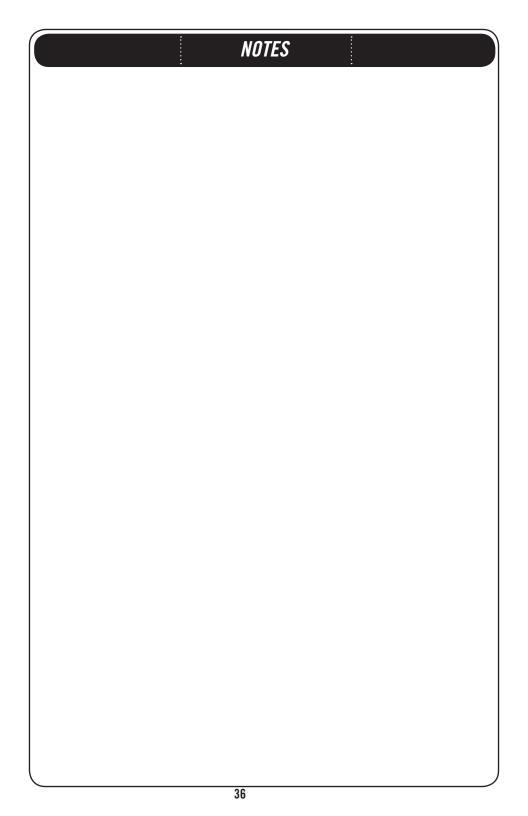

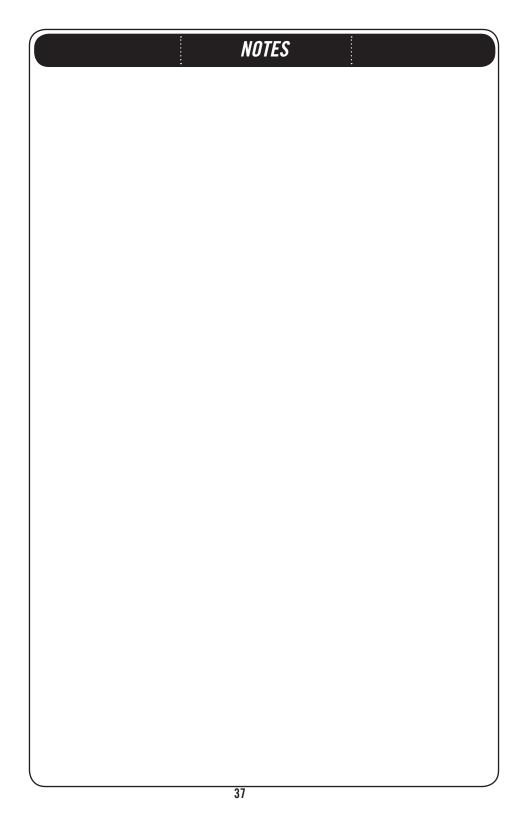

*If a Warning Label or Sticker is illegible, destroyed or removed, contact Customer Service for a replacement.* 



The Warning Label is located on the Ball Return Net at the front of the system.

1052685



The Pinch Warning stickers are located on the Fold-up Plates on the left side of the system near the bottom.



The System Fold Up Warning sticker is located on the Side Rail with Push Button on the left side of the system near the bottom.

# WARRANTY INFORMATION

#### LIFETIME BASKETBALL EQUIPMENT 90-DAY LIMITED FACTORY WARRANTY The manufacturer reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.

1. Lifetime basketball systems are warranted to the original purchaser to be free from defects in material or workmanship for a period of ninety days from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.

2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective basketball equipment. If the equipment is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the basketball system or its components are not covered under this warranty.

3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the net or rim will void this warranty.

4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.

5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.

6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by Federal and state law. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

#### ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY A SALES RECEIPT. Report product defects in writing to:

Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010, or call (800) 225-3865

M-F 7 a.m. to 5 p.m. MST. \*\*Call or visit our Web site for Saturday hours\*\* Please include your dated sales receipt and photographs of damaged parts. To register the product, visit our Web site at www.lifetime.com

