




WESTMANN

MONTAGEANLEITUNG

Westmann Hollywoodschaukel
„Nova“ • ASM40310A

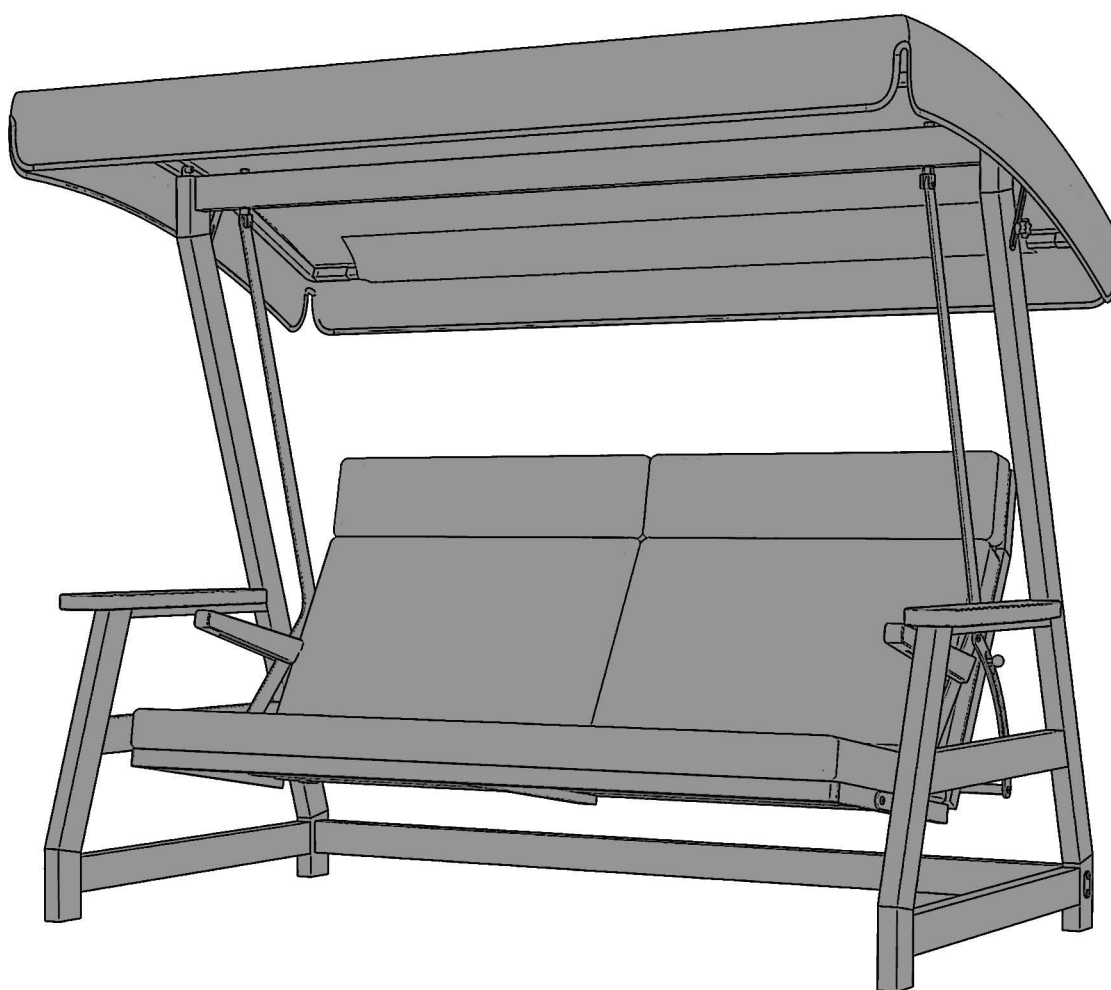

**BEI FRAGEN, KONTAKTIEREN SIE
UNSEREN KUNDENSERVICE:**

50NRTH GmbH
Straßburgstraße 14-16
D-54516 Wittlich

service@50NRTH.com
+49 (0) 6571 95117-0

BAUTEILE:



x8

M8x80 AB IMBUS CIVATA / AB HEX BOLT
H15004002004




x8

M8x40 AB IMBUS CIVATA / AB HEX BOLT
H15004002010




x8

M8 DIN 125 PUL / WASHER M8 DIN 125
H15004007006



x2

M8 AYAR TOPUZU / ADJUSTMENT KNOB
H15004011001

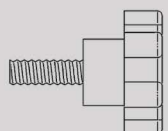


x2

M8x30 BAKALIT SIKACAK / BAKELITE
TIGHTENER
H15004002021




x1

ALYAN ANAHTARI / ALLEN KEY
H15004012002




x2

M10 ÇATALLI MAFSAL / FORK LINK
H15004008001




x2

POLIAMID BURÇ / POLYAMIDE BUSHING
H15004006001



x2


M10x100 1.25 CIVATA / BOLT
H15004002005



x4

3/8 1mm PUL / WASHER
H15004007002



BAUTEILE:

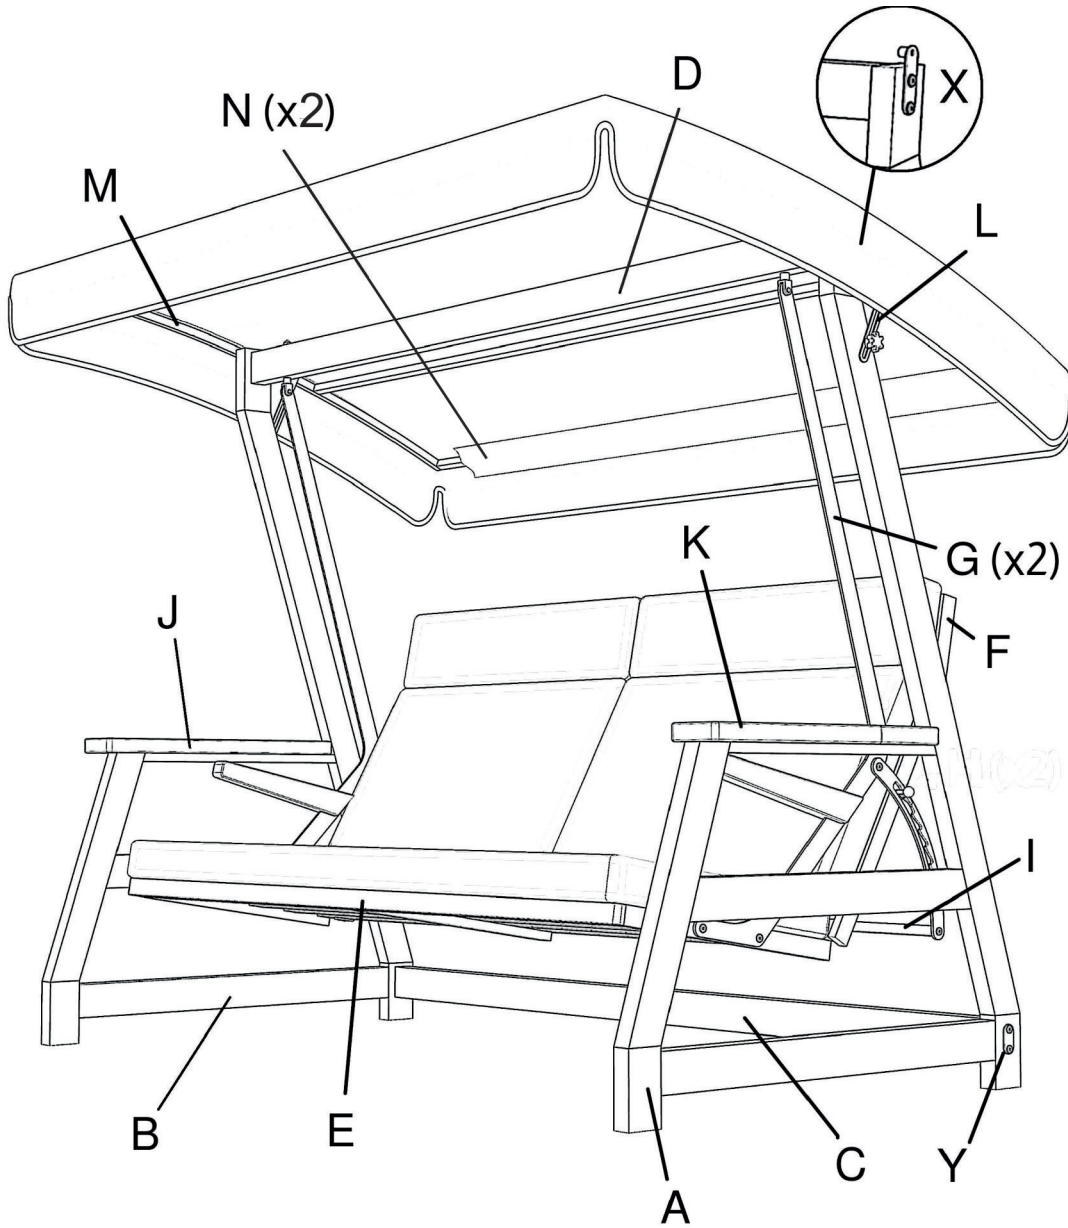


A-	NOVA TAŞIYICI AYAK SOL	NOVA LEFT LEG	Y7131011164030000
B-	NOVA TAŞIYICI AYAK SAĞ	NOVA RIGHT LEG	Y7131011154030000
C-	NOVA ARÄ KAYIT ALT	NOVA BOTTOM CENTER SUPPORT	Y7131011134030000
D-	NOVA ARA KAYIT ÜST	NOVA TOP CENTER SUPPORT	Y7131011144030000
E-	NOVA OTURAK ALT	NOVA SEAT BOTTOM SECTION	Y7131019394030000
F-	NOVA OTURAK SIRT	NOVA SEAT REAR SECTION	Y7131019404030000
G-	NOVA ANA ASKI DEMİRİ	NOVA SEAT HANGER	H15004013003
I-	NOVA KADEME ÇİTASI	NOVA ADJUSTMENT LATH	Y7131012174030000
K-	NOVA SEHPA SOL	NOVA LEFT SIDE TABLE	Y7131011284030000
J-	NOVA SEHPA SAĞ	NOVA RIGHT SIDE TABLE	Y7131011274030000
L-	NOVA TENTE ASKISI SOL	NOVA CANOPY SUSPENDER LEFT	Y7131017374030000

MONTAGEANLEITUNG:


1

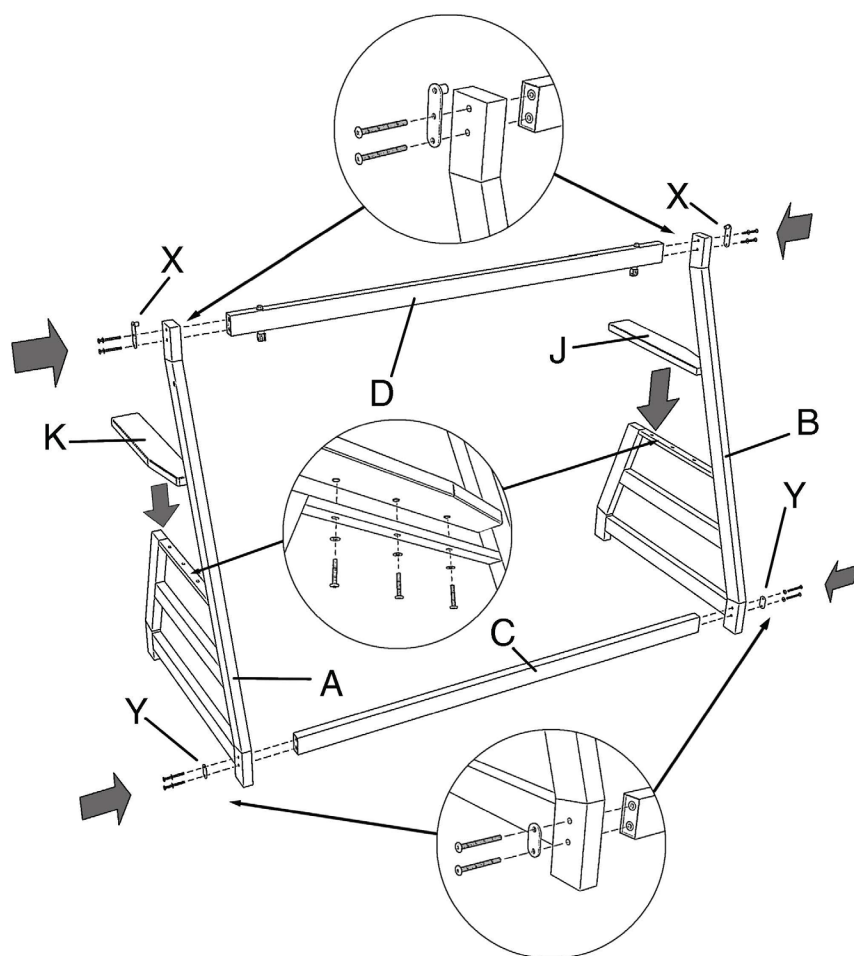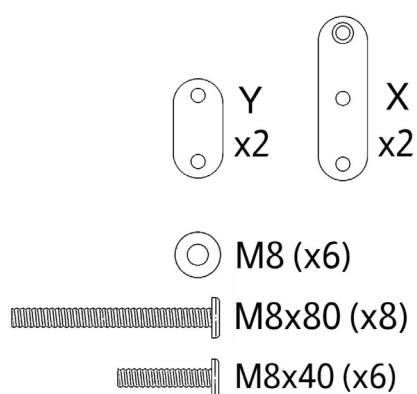



2

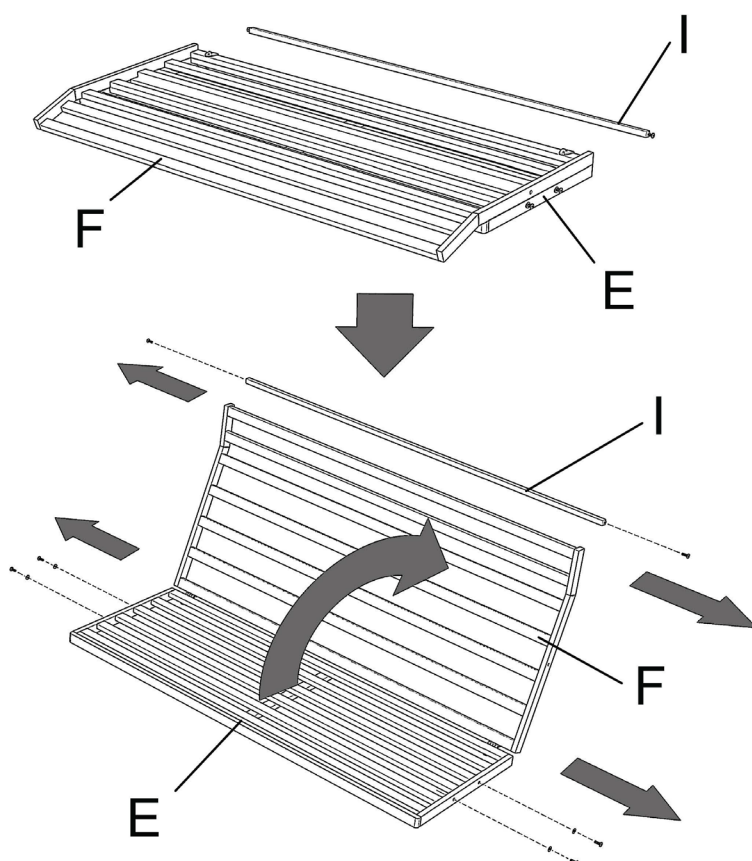



3

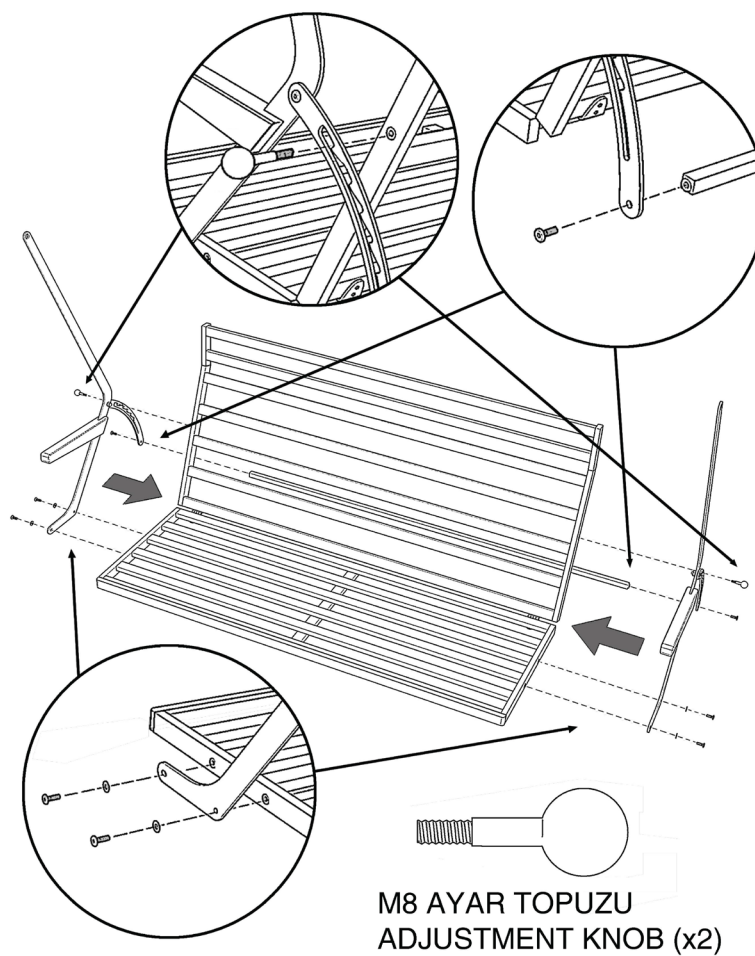

4

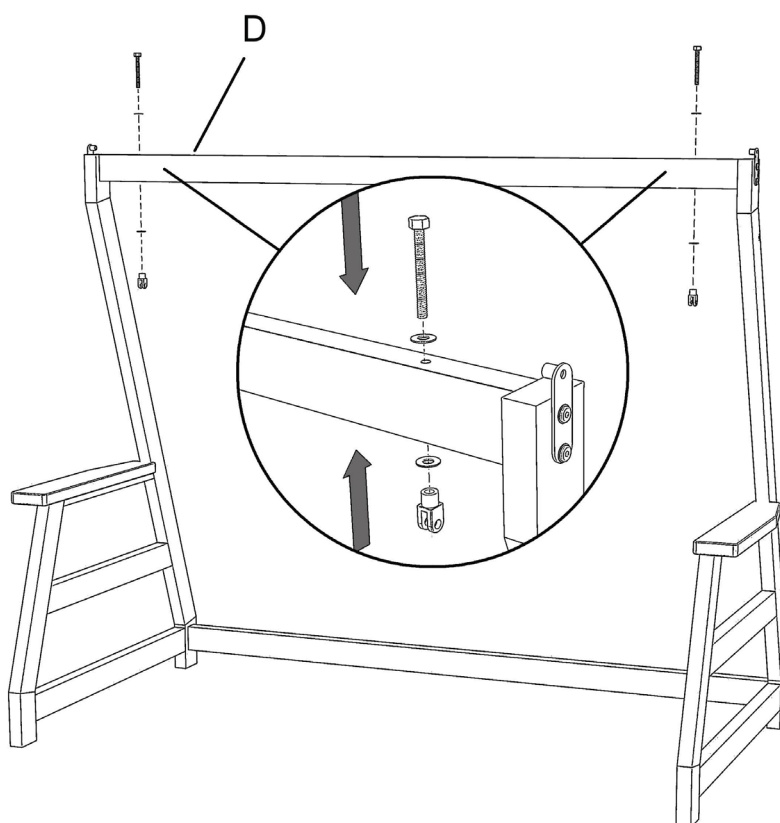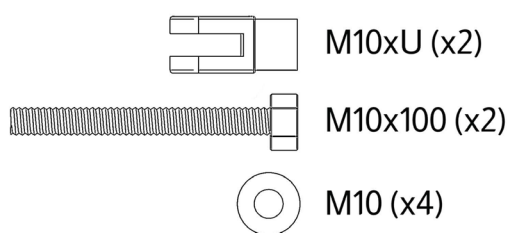


5

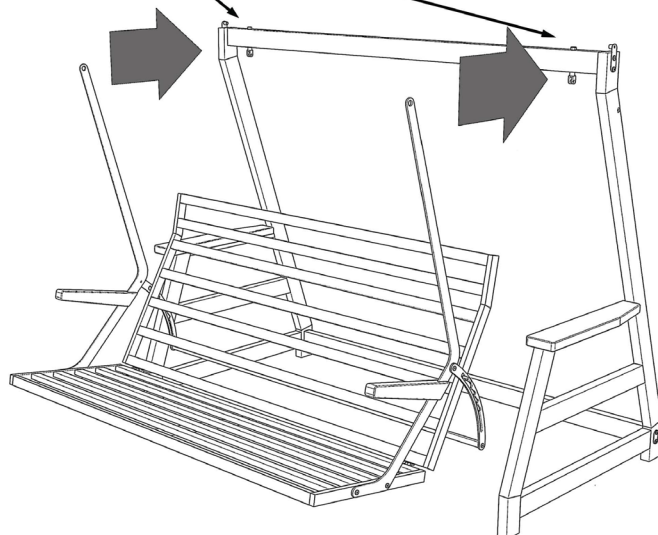
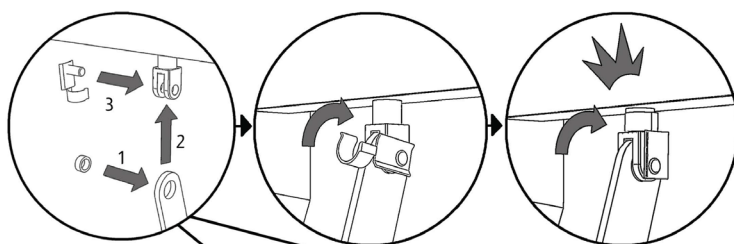


○ POLIAMID BURÇ
POLYAMIDE BUSHING (x2)

6

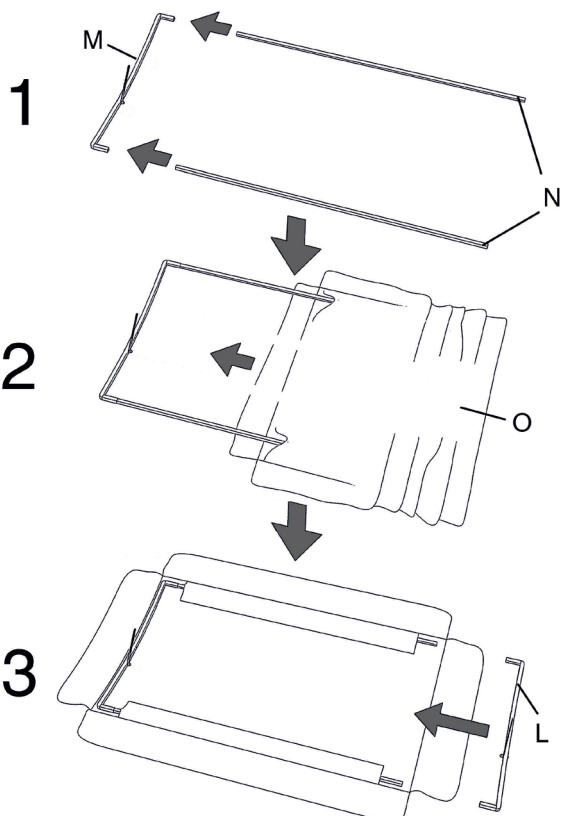

7

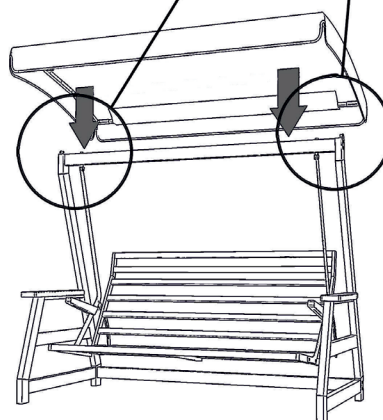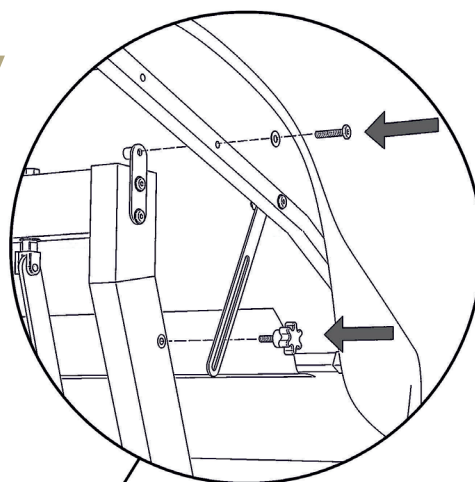

■ M8x40 (x2)

○ M8 (x2)

■ M8 (x2)